


# Montage der Kabeladapter

NFM0 ZADAP AEO M0 für NFM 750/600 - NFM0 ZADAP AEO NL für NFM 550/050  
zum Anschluss von 0...20 mA / 4...20 mA Sensoren mit offenem Kabelende

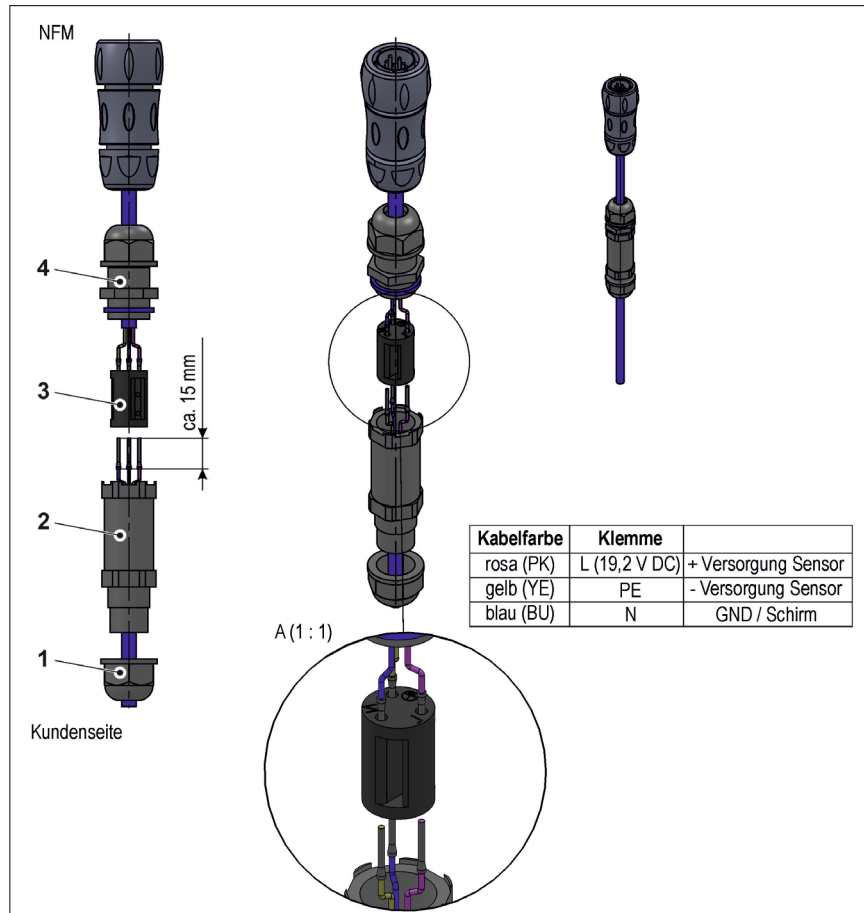


## Vorgehensweise

1. Kundenseitige Kabelverschraubung (Pos. 1) und Rohr (Pos. 2) über das Sensorkabel fädeln.
2. Sensorkabel gemäß der nebenstehenden Tabelle am Klemmblock (Pos. 3) anschließen.
3. Rohr (Pos. 2) auf die NFM-seitige Kabelverschraubung (Pos. 4) aufschieben und festschrauben.
4. Kabelverschraubung (Pos. 4) auf das Rohr (Pos. 2) aufschieben und festschrauben.
5. Sicherstellen, dass beide Kabelverschraubungen (Pos. 1 und 4) den Kabelmantel dicht abschließen.

## Installation of Cable Adapters

NFM0 ZADAP AEO M0 for NFM 750/600 - NFM0 ZADAP AEO NL for NFM 550/050  
for the connection of 0...20 mA / 4...20 mA sensors with open cable end

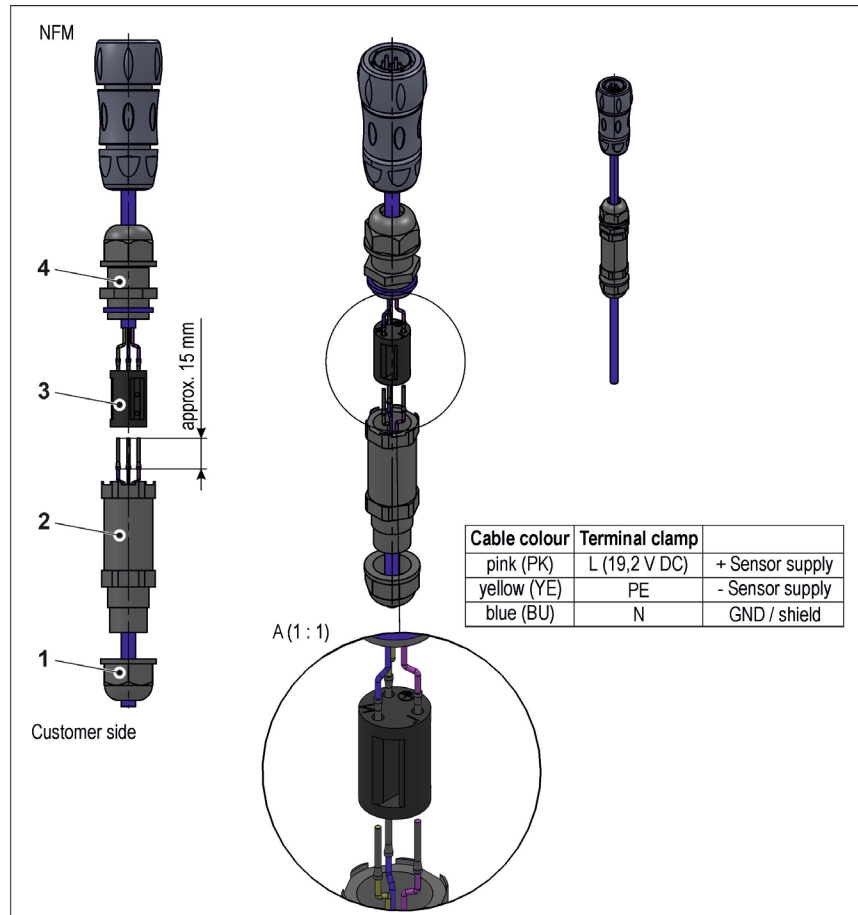

### Procedure

1. Thread the customer's cable gland (Pos. 1) and tube (Pos. 2) over the sensor cable.
2. Connect the sensor cable to the terminal block (Pos. 3) according to the opposite table.
3. Push the tube (Pos. 2) onto the cable gland (Pos. 4) on the NFM side and screw tight.
4. Push the cable gland (Pos. 4) onto the tube (Pos. 2) and tighten.
5. Make sure that both cable glands (Pos. 1 and 4) seal the cable sheath tightly.