


Montage de l'adaptateur de câble

NFM0 ZADAP AEO M0 pour NFM 750/600 - NFM0 ZADAP AEO NL pour NFM 550/050

pour le raccordement de capteurs 0...20 mA / 4...20 mA avec extrémité de câble ouverte

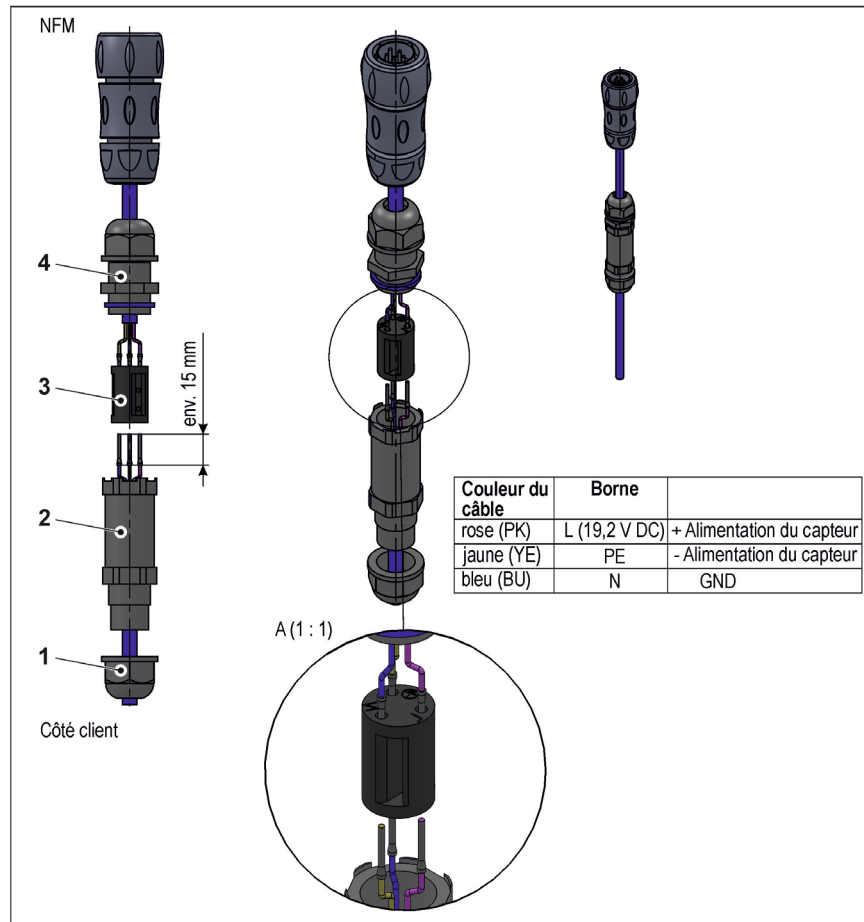


Méthode

1. Passer le câble du capteur à travers le presse-étoupe (élément 1) et le corps du connecteur (élément 2).
2. Connectez le câble du capteur au bornier (élément 3) selon le tableau ci-contre.
3. Poussez le corps du connecteur (élément 2) sur le presse-étoupe côté NFM (élément 4) et vissez-le fermement.
4. Poussez le corps du connecteur (élément 4) sur le presse-étoupe côté NFM (élément 2) et vissez-le fermement.
5. Assurez-vous que les deux presse-étoupes (éléments 1 et 4) scellent hermétiquement la gaine du câble.

Installation of Cable Adapters

NFM0 ZADAP AEO M0 for NFM 750/600 - NFM0 ZADAP AEO NL for NFM 550/050
for the connection of 0...20 mA / 4...20 mA sensors with open cable end

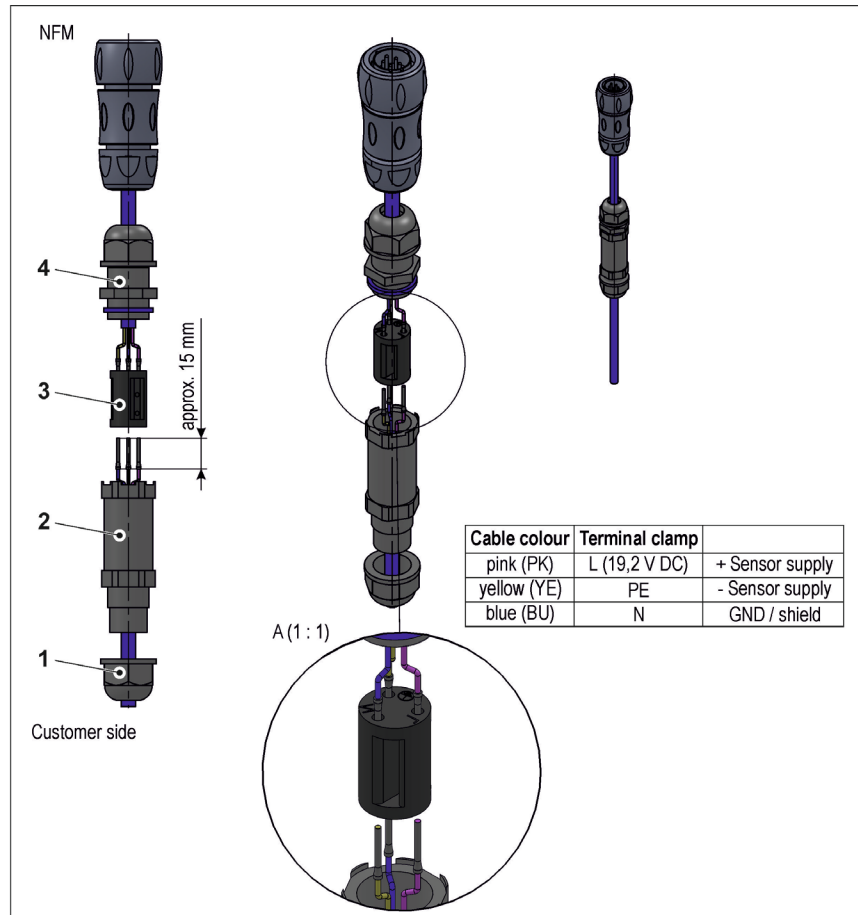

Procedure

1. Thread the customer's cable gland (Pos. 1) and tube (Pos. 2) over the sensor cable.
2. Connect the sensor cable to the terminal block (Pos. 3) according to the opposite table.
3. Push the tube (Pos. 2) onto the cable gland (Pos. 4) on the NFM side and screw tight.
4. Push the cable gland (Pos. 4) onto the tube (Pos. 2) and tighten.
5. Make sure that both cable glands (Pos. 1 and 4) seal the cable sheath tightly.